

# TIVO BOLT™ REMOTE

The **TIVO BUTTON** takes you to the TiVo Central® screen, the starting point for TiVo features and settings.

If programmed, **TV PWR** turns your TV on or off.

Use **INPUT** to select the input (such as a DVR, DVD player, game system) your TV displays.

**BACK** goes back to the previous screen (in certain apps).

**GUIDE** takes you to the program guide, where you can find shows to watch or record.


If programmed, **VOLUME** and **MUTE** control the volume on your TV or A/V receiver.

**PLAY**, **PAUSE**, **REWIND**, **FAST-FORWARD** or play shows in **SLOW MOTION**. Press **Rewind** and **Fast-Forward** up to three times for three speeds.

**REPLAY** repeats the last 8 seconds of the show. Press and hold to jump to the beginning of a show.

The **A**, **B**, **C** buttons set options and sort and filter views. The **D** button initiates **SkipMode™** while watching a recording where **SkipMode** is available. Look for the on-screen tips.

**CLEAR** removes the display of the info banner or program guide, and deletes titles from the **My Shows** or **To Do** list.

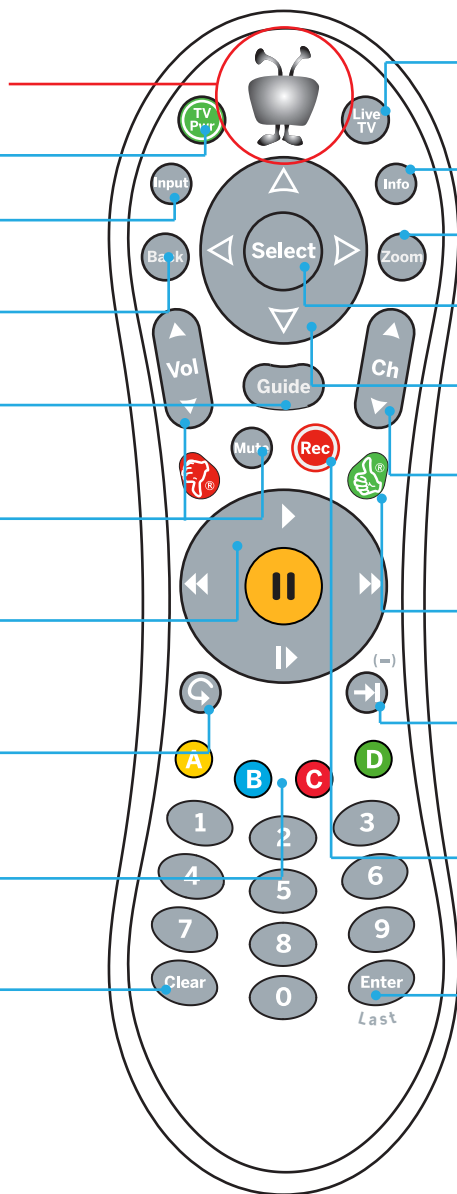

**LIVE TV** takes you to live TV. If you're watching live TV, use it to cycle through the tuners.

**INFO** shows the info banner while watching live TV; press it again to make it disappear.

Use **ZOOM** to change aspect ratio of shows on your TV or to return to full-screen from the Video Window.

Press **SELECT** to choose menu items or, when watching live TV, to bring up the Mini Guide.

Use the **ARROW BUTTONS** to navigate the TiVo menus and the program guide.

Use the **CHANNEL UP/DOWN** buttons to change the channel and to page up or down while in the program guide or TiVo menus. **CHANNEL UP** also initiates **SkipMode™** while watching a recording where **SkipMode** is available.

Use the **THUMBS UP** and **THUMBS DOWN** buttons to rate shows, collections, or video providers for TiVo Suggestions.

**ADVANCE** moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press **Advance** to jump to the next tick mark when fast-forwarding or rewinding.

On a **DVR**, press **RECORD** to record the show you're watching, or to set up a recording for a show selected in the guide. On other devices, pressing **RECORD** has no effect.

**ENTER/LAST** returns you to the last channel tuned to in live TV.