

# QUICK TOUR - MY SHOWS

All of your recordings, streaming videos, and downloaded or transferred shows appear in the My Shows list. To get to the My Shows list from any menu screen or from live TV, just press the TiVo button - at the top of your remote control - twice. (Press it only once if you're already on the TiVo Central screen.)

Note: Your TiVo Mini must be connected to a host DVR to view your My Shows list.

My Shows contains both individual shows or movies, as well as folders for series or other related shows. We'll talk more about folders later.

When you highlight an individual show in My Shows (even one that's currently recording) and press PLAY - at the top of the circle around the PAUSE button in the center of your remote, the show will play from the beginning or to resume playing from where you left off. When you highlight a folder in My Shows and press PLAY, all of the shows in the group play in sequence, beginning with the oldest.

You can also highlight a show in My Shows and press SELECT - the round button at the center of the arrows circle on your remote. On an individual show, this opens a Program Details screen, where you'll be able to play, delete, or get more information about the show. Pressing SELECT on a folder takes you to the contents of that folder, with the first show in the folder highlighted. Press SELECT again to open the Program Details screen.

To delete an individual show or a folder, highlight it and press CLEAR - the leftmost button on the bottom row of your remote. If you are deleting a OnePass folder that contains recordings, you will have the option to convert the recordings to streaming videos. This option can be useful if you are trying to conserve disk space. Note that deleting a show from a TiVo Mini will also delete it from the host DVR.

When viewing the My Shows list, use the CHANNEL UP/DOWN button to jump an entire page at a time - the CHANNEL UP/DOWN button is the vertical oval button on the right between the arrow circle and the Pause circle on your remote.

## USING MY SHOWS CATEGORIES

The left column of the My Shows list contains categories that help you quickly locate shows in the list. Highlight a category in the left column to view shows only in that category; for example, highlight "Kids" to view only kids' shows, or "Movies" to view only movies.

**NOTE:** When the "Kids" category is turned on, shows and movies for kids will appear only in that category. (For example, you'll find kids movies under "Kids," not under "Movies.")

## PERSONALIZING YOUR MY SHOWS LIST

You can personalize your My Shows list by hiding certain categories or changing the category order. To personalize your My shows list:

1. Press the A button - the leftmost button in the line of buttons between the PAUSE circle and the number pad on your remote.
2. Select 'Left column.'
3. To hide a category, just uncheck it. Highlight the category you want to hide and press SELECT - the round button at the center of the arrows circle on your remote.
4. To change the order of the categories, highlight the one you want to move, press the RIGHT arrow - on the right of the arrows circle just below the TiVo button on your remote, and then use the UP and DOWN arrows to place the category where you want it.
5. When you're happy with your list, press the A button twice to return to the My Shows list. The A button is the leftmost button in the line of buttons between the PAUSE circle and the number pad on your remote.

## MY SHOWS FOLDERS

Shows are organized into folders, and a number in parentheses to the right of each folder shows how many recordings it contains. In addition to folders for each OnePass search you've created, My Shows also has the following folders:

- **Streaming Movies** Contains links to movies that are available to stream.
- **TiVo Suggestions** If you have auto-recording of Suggestions turned on, any recorded Suggestions appear here.
- **WishList searches** If your WishList searches are set to auto-record, any matches will be added to a WishList folder.
- **Currently Unavailable** Contains links to streaming videos you've chosen that are not currently available from any of your video providers. When items become available, they will be moved to the appropriate My Shows category.
- **Recently Deleted Recordings** Contains recently deleted recordings that are available for recovery.

A show's title may appear in more than one group. When you delete a show in one folder, the title also disappears from any other group.

When you highlight the group name and press the PLAY button, all of the shows in the group play in sequence, beginning with the oldest.

## SEASON SELECTOR

If a OnePass group contains more than one season and more than 30 episodes, a season selector will be displayed at the top of the list. Move to the number of the season you want, then press SELECT to jump between seasons.

## SORTING AND FILTERING SHOWS

You can organize My Shows either alphabetically by title (from A to Z) or by date added. Press the B button to change how the list is sorted. The B button is the second from the left in the line of buttons between the PAUSE circle and the number pad on your remote. Press it again to switch the sort order back.

When viewing a OnePass folder, press the B button to sort by season, date, or newest to oldest. Press the C button - just to the right of the B button - to filter your OnePass views:

- **My episodes** Displays only episodes that match your OnePass options. For example, if you set up your OnePass to start at Season 3 and exclude episodes that require purchase to view, only free episodes from Season 3 onward will be displayed. You can watch or delete shows from this view.
- **All episodes** Displays all episodes, regardless of your OnePass options. For example, even if your OnePass starts at Season 3 and excludes episodes that require purchase to view, this view will display all episodes in the series. You can watch episodes from this list, but you can't delete them.
- **Recordings** Displays only recordings included in your OnePass. This view can be helpful if you are trying to manage disk space.

## PROGRAM DETAILS SCREEN

To get to the Program Details screen, highlight any show in My Shows and press SELECT - the round button at the center of the arrows circle on your remote. The Program Details screen offers these options:

- **Play** (or **Resume playing** if you're returning to a partially watched show).
- **Delete** (or **Stop recording** if recording is in progress).
- **Related videos** Watch YouTube videos related to the show.
- **Explore this show** Find details about the show, including information about upcoming episodes and cast members.
- **More options** Choose how long to keep a recording (by default, recordings are saved until space is needed for new ones), view upcoming episodes or broadcasts of a show or movie, or get or modify a OnePass search.

