

QUICK TOUR - CONTROLLING LIVE TV

When you're watching a show as it's broadcast, you're watching live TV. Press the LIVE TV button - on the right of the TiVo button at the top of your remote - to go to live TV from any TiVo screen.

USING TRICKPLAY™

1. First, press the PAUSE button in the center of your remote. You can pause live TV for up to 30 minutes.
When you pause live TV, a status bar is displayed showing a one-hour period. The green segment shows the portion of the hour that has been saved by your TiVo box. The thick white line marks your current point in time. When the white line is back in the green segment, you're "behind" live TV.
2. Press PLAY - at the top of the circle around the PAUSE button in the center of your remote - to continue watching the show. Next, press REWIND - in the circle to the left of the round PAUSE button in the center of your remote - and the show rewinds. Press REWIND a second time to rewind faster, and a third time to go at triple speed. Press PLAY at any time to return to normal speed.
3. Press PAUSE again, and, with the show paused, press FAST FORWARD - in the circle to the right of the round PAUSE button in the center of your remote - to move a small step forward. Press REWIND to move a small step back. Press PLAY to resume watching at normal speed.
4. Press REPLAY - the round button on the left below the PAUSE circle. The show jumps back 8 seconds — useful for when you miss a great sports play or a bit of dialog, or for when you fast forward too far.
5. Press REPLAY again, then immediately press SLOW - at the bottom of the circle around the PAUSE button in the center of your remote - to see your own slow-motion replay.
6. Press ADVANCE - the round button on the right below the PAUSE circle - button. You'll instantly move forward 30 seconds.
7. Press and hold the ADVANCE and presto! You're caught up to live TV.
8. Press and hold the REPLAY button to skip back to the beginning of the saved portion.

CHANGING CHANNELS

To move one channel at a time, press CHANNEL UP/DOWN - the vertical oval button on the right between the arrow circle and the PAUSE circle on your remote.

To go to a specific channel, use the number pad - 10 buttons arranged in rows in the lower third of the remote control, then press ENTER - the bottom-most button on the right of remote. (If you don't press ENTER, the channel changes automatically after a few seconds.) To jump back to the previous channel on the same tuner, press ENTER again.

Tired of channel surfing? Press GUIDE - the horizontal oval button just below the arrow circle - to display the program guide. Highlight any show and press SELECT - the round button at the center of the arrows circle. If the show is currently on, the channel changes. If the show is on later, you'll see options to record it. Learn more in [Using the guide and mini-guide to find shows](#).

WATCHING MULTIPLE SHOWS AT ONCE

(Not applicable to TiVo Mini.)

Your TiVo box can watch (and record!) up to four shows at the same time. Go ahead, try it:

1. First, press PAUSE - the round button in the center of your remote - to pause the live TV show you're watching. Let's call the tuner you're watching "Tuner 1."

2. Press the LIVE TV - on the right of the TiVo button at the top of your remote - to switch to the next tuner, "Tuner 2." Whenever you press LIVE TV, you'll switch to the next tuner in line.
Note: You may see the same channel on more than one tuner.
3. Change the channel if you like, watch the new show for a few moments, then press LIVE TV again to switch to Tuner 3.
4. Change the channel, watch for a few moments, then press PAUSE.
5. Press LIVE TV again to switch to Tuner 4. Again, change the channel, watch for a few moments, then press PAUSE.
6. Press LIVE TV once more to switch to Tuner 1. Notice that the first show you were watching is still paused. Press PLAY - at the top of the circle around the PAUSE button in the center of your remote, (or PAUSE again) to continue watching the show.
7. Press LIVE TV to switch to Tuner 2. Because you didn't pause this show, it's still playing. Press REWIND - in the circle to the left of the round PAUSE button in the center of your remote - to watch the part of the show you missed. Press PLAY to start playing.
8. Continue pressing LIVE TV to cycle through the rest of the tuners, and back to Tuner 1. Shows you paused are still paused; shows you were watching are still playing. You can rewind them to catch what you missed!

RECORDING THE SHOW YOU'RE WATCHING

You can always record the show you're watching by pressing RECORD - the slightly concave, round button above the PLAY button, and then selecting 'Record this showing.' Select 'OnePass & other options' or 'Explore this show' for more choices.

RECORDING THE SAVED PORTION

Up to 30 minutes of the current channel's broadcast is always being saved, even when you're not recording. When you change channels, the TiVo box clears the saved portion on the tuner you're watching and starts saving again on the new channel. So, if the saved portion is important to you, either record the program or don't change the channel.

To record the saved portion in addition to the rest of the program, press RECORD and choose 'Record this showing.'

STOPPING A RECORDING

You can stop any recording in either of two ways: press RECORD while watching live TV, then choose 'Stop the current recording.' Or, from the My Shows list, chose a title that's currently recording, and press SELECT. Choose 'Modify recording,' then 'Stop recording.'