

# TIVO BOLT USER PREFERENCES

From the TiVo Central screen, choose 'Settings & Messages,' then 'User Preferences' to customize the display of closed captioning, turn the video window on/off, and much more. On the User Preferences screen, use the UP and DOWN arrows - the top and bottom of the arrows circle just below the TiVo button on your remote - to move to an item, then press SELECT for options. Press SELECT again to set the option you choose.

User Preferences include:

- [My Video Providers](#)
- [OnePass & Recording Options](#)
- [Closed Captioning](#)
- [Video Window](#)
- [TiVo Suggestions](#)
- [Customize Discovery Bar](#)
- [Screen Reader](#)

## MY VIDEO PROVIDERS

Use this screen to select the video providers (like Netflix or Amazon) that you would like included in your results when searching for TV shows and movies.

**Note:** OnePass works best when this list is up to date, with as many video providers as possible selected.

## ONEPASS & RECORDING OPTIONS

Use this screen to set OnePass and recording options that will apply to all OnePasses you set up, and all shows you record that are not part of OnePasses. You can change the default values at any time. For more information, see [Setting OnePass & recording options](#).

## CLOSED CAPTIONING

Change the way the TiVo box displays closed captioning text. To turn closed captioning on or off while watching a show, press INFO - the second button down on the right of the TiVo button - to view the info banner, and select the closed captioning icon.

## VIDEO WINDOW

Turn the Video Window on or off permanently.

## CLIP OVERLAPPING SHOWS

Choose to clip or cancel a recording if a recording conflict occurs.

## TIVO SUGGESTIONS

Choose whether to record TiVo Suggestions automatically when space is available.

## CUSTOMIZE DISCOVERY BAR

Personalize the contents of the Discovery Bar based on your own preferences.

## SCREEN READER

Your TiVo box can read the text that appears on screen. Turn the screen reader on or off by pressing the A button - the leftmost button in the line of buttons between the PAUSE circle and the number pad on your remote - for two seconds. You'll hear a voice say, "Screen reader on" or "Screen reader off."

When the screen reader is on, the TiVo menu text will be audible. In addition:

- When the CHANNEL UP/DOWN button on the remote control pressed, the channel and program information will be audible.
- When the INFO button on the remote control is pressed, program information will be audible.

To adjust the volume of the screen reader, use the VOLUME button - the long oval shaped button on the left between the arrow circle and the Pause circle on your remote. Or, if the are having trouble hearing the screen reader over the video that's playing, pause the video by pressing PAUSE - the round button in the center of your remote.

Turn the screen reader off temporarily by pressing the A button quickly. Note that this function does not work on the My Shows screen or when using the Guide.