

# TIVO BOLT AUDIO & VIDEO SETTINGS

On the TiVo Central screen, move to 'Settings & Messages' and press SELECT - the round button at the center of the arrows circle on your remote. Then move to 'Audio & Video Settings' and press SELECT.

Audio & Video settings include:

- [Language & Audio Description](#)
- [Dolby Audio](#)
- [Sound effects Volume](#)
- [Aspect Correction Mode](#)
- [Letterbox & Sidebox Color](#)
- [Video Resolution](#)

## LANGUAGE & AUDIO DESCRIPTION

Some shows are broadcast with an audio description track and more than one language track. Use this setting to choose to use the audio description track or to change the default language for shows with multiple tracks available.

Note: You can also switch to the audio description track while watching a show by pressing INFO - the second button down on the right of the TiVo button - and then selecting the "Audio Description" option from the Info Banner.

## DOLBY AUDIO

If you have an A/V receiver or home theater system that supports Dolby audio, use this setting to choose how the TiVo box will record and output digital audio. Check your A/V receiver or home theater system manual for its capabilities.

If a show is broadcast with a Dolby audio track, a Dolby Audio icon will appear in the info banner.

**Note:** Dolby Audio is not available if the screen reader is enabled.

## SOUND EFFECTS VOLUME

Change the volume of the TiVo box's sound effects (the tones played when you press buttons on the remote control). The default is Medium.

## ASPECT CORRECTION MODE

Aspect correction mode alters the way video appears on your screen. Usually, it's applied when you are watching an SD show on an HD television screen. Use the Aspect Correction Mode settings screen to choose from the following options:

- Full mode stretches the video's width more than its height. The picture fills your screen, but it may be distorted.
- Panel mode adds letterbox or sideboxes around the video. The picture will not take up your entire screen, and it will not be distorted.
- Zoom mode enlarges the video proportionally. The picture will take up your entire screen, but edges of the picture may be cropped. This mode eliminates letterbox and sideboxes without distorting the video.

## LETTERBOX & SIDEBOX COLOR

Letterbox is used to fit a 16 x 9 show on a 4 x 3 screen, and sidebox is used to fit a 4 x 3 show on a 16 x 9 screen. Choose which color the TiVo box should use when it adds letterbox or side bars to the picture: gray or black.

## **VIDEO RESOLUTION**

TV shows are broadcast in a variety of resolutions, and TV equipment receives and displays video in a variety of resolutions. For any given show, the format in which a show is broadcast may or may not match a format that your TV is capable of displaying.

The TiVo box receives all video signals, including UltraHD/4K (2160p), 1080i, 720p, 480p and 480i.

If you are using an HDMI® cable to connect your TiVo box to your television, the TiVo box will automatically set the optimal resolution for your TV.

The Video Resolution screen also allows you to test and set the video resolution manually. Select 'Test Formats' and then follow the on-screen prompts to test which video resolutions your television can display. Those that are supported will be automatically selected in the list of available resolutions. You can also set the output format automatically by selecting 'Auto Detect' from the Video Output Formats screen.