

TIVO ROAMIO PARENTAL CONTROLS SETTINGS

Parental Controls help you make sure your family has access to only those shows you want them to watch. On the TiVo Central screen, move to 'Settings & Messages' and press SELECT - the round button at the center of the arrows circle on your remote. Then move to 'Parental Controls' and press SELECT.

Once Parental Controls are on, you must enter your Parental Controls password to change any Parental Controls settings.

To turn Parental Controls on, use the NUMBER buttons - the 10 buttons arranged in rows in the lower third of the remote control - to enter a four-digit password, then enter the same password again for confirmation. When you turn off Parental Controls, the password is deleted and anyone can view any shows or watch any channels.

Parental Controls settings include:

- [Rating Settings](#)
- [Hide Adult Channels](#)
- [Lock Channels](#)
- [Change PIN](#)

RATING SETTINGS

Movies originally meant for release to theaters have a different rating system from shows made for TV. Use rating limits to set rules for both rating systems, as well as for specific types of TV content. Move to an rating option, and then use LEFT and RIGHT - on the left and right of the arrows circle just below the TiVo button on your remote - to change the rating limit.

- **TV/Movie rating limits:** Ratings shaded in green are not locked; ratings in red are locked. Use the UP and DOWN arrows - the top and bottom of the arrows circle just below the TiVo button on your remote - to adjust which ratings are locked.
- **Block unrated programs:** Some movies and TV shows are unrated. Use this setting to block all unrated movies or TV shows.
- **Manage other ratings:** Additional regional ratings may be available.

HIDE ADULT CHANNELS

When this setting is on, adult shows do not appear in search results, and titles/descriptions of adult shows are hidden in the program guide and My Shows. You will need to enter the Parental Controls PIN to watch any adult content.

LOCK CHANNELS

When a channel is locked, the Parental Controls PIN must be entered to view the channel. You can lock specific channels, or all channels. Move to a channel and press SELECT to lock or unlock it.

CHANGE PIN

Enter a new PIN using the NUMBER buttons, then re-enter the new PIN to confirm.