

TIVO ROAMIO STANDBY MODE

To conserve power, you can put your TiVo box into Standby mode. From the TiVo Central screen, move to 'Settings & Messages' and press SELECT - the round button at the center of the arrows circle on your remote. Then move to 'Standby' and press SELECT.

To return to normal mode from Standby, press the TiVo button - at the top of your remote control - or the LIVE TV button - on the right of the TiVo button.

You can choose from several levels of power saving when your device enters Standby.

When the TiVo box is in Standby:

- Your TV shows a black screen and the lights on the front of the TiVo box go out.
- Shows that are being recorded or are scheduled to record will still be recorded.
- The TiVo box will still connect to the TiVo service.
- If you temporarily turned off Parental Controls, Standby mode re-enables them.
- If live TV is paused when Standby is selected, the TiVo box will remain paused for up to 30 minutes.
- TiVo Suggestions may be recorded, depending on your power saving setting.