

# TIVO MINI REMOTE, CABLECARD, & DEVICE SETTINGS

On the TiVo Central screen, move to 'Settings & Messages' and press SELECT - the round button at the center of the arrows circle on your remote. From the Settings & Messages screen, choose 'Settings,' and then choose 'Remote, CableCARD, & Devices.'

Remote, CableCARD, and Device settings include:

- [Remote Control Settings](#), including how to program and pair your remote control
- [Name this TiVo Box](#)
- [Network Remote Control](#)

## REMOTE CONTROL SETTINGS

### PROGRAMMABLE BUTTONS

Some buttons on the TiVo remote are programmable. You have options to control power, volume, and mute on your TV; volume and mute on your A/V receiver (stereo system); and input selection on your TV — all from your TiVo remote!

To program your remote, from the TiVo Central screen, select 'Settings & Messages,' then 'Settings,' then 'Remote, CableCARD, & Devices,' then 'Remote Control Setup.' Follow the on-screen instructions.

To reset all the programmable buttons:

1. Press and hold the TV PWR and TiVo buttons simultaneously for about 3 seconds. The TiVo button is at the top of your remote, and TV PWR is on its left.
2. Press THUMBS DOWN – the left-most buttons, respectively, below the GUIDE button and above the Pause Circle - three times, then press ENTER.

### RF REMOTE SETUP (REMOTE PAIRING)

The TiVo Roamio remote is an RF remote. This means that the remote can control your TiVo box even if the box is not in direct line of sight with the remote (for instance, if it is behind a cabinet door).

Your remote control should be ready to use in RF mode after you complete Guided Setup. However, if you have trouble using the remote in RF mode, or if you purchase additional remotes, you may need to "pair" the remote to your DVR before using it.

### PAIRING YOUR REMOTE

To use the remote in RF mode, you must first pair the remote with your TiVo box:

1. Press and hold the BACK button - the third button down on the left of the of the TiVo button - and the TiVo button simultaneously for about 3 seconds.
2. After about one second, the amber activity light on the remote flashes five times.

Your remote is paired! Once a remote is paired with a TiVo box, it will only work in RF mode with that box. It will continue to work with other boxes in IR mode (in which the box must be in line-of-sight to communicate with the remote).

**Note:** Not sure if your remote is paired? When a remote is paired with a TiVo box, the remote's activity light flashes amber when you press a remote button. When a remote is not paired, the activity light flashes red.

### UNPAIRING YOUR REMOTE (TO USE IT WITH A DIFFERENT TIVO BOX)

To pair the remote with a different box, you must first unpair it with the current box, then pair it with the new one. Note that this process will reset the remote completely, so you will need to repeat setup of the remote's programmable buttons (TV power, volume, mute). To unpair the remote:

1. Hold down the POWER and TiVo buttons at the same time until the activity light flashes.
2. Press THUMBS DOWN three times.
3. Press ENTER.

## **TIVO DVR CONNECTION**

Use this setting to change which TiVo DVR this box uses as a host. The TiVo Mini will connect to this DVR for streaming shows, recording new shows, and watching live TV.

**Note:** You can also watch recorded shows from other DVRs in your household without changing this setting. Just select a DVR from your My Shows list.

## **NAME THIS TIVO BOX**

Set or change the name of your TiVo Mini. You can choose from a list of suggested names or create your own.

## **NETWORK REMOTE CONTROL**

You can integrate your TiVo box, home automation, and entertainment control devices on your network. These devices include touch panel remotes and other devices that are configured to work with TiVo's network-based remote control protocol. This setting will be enabled by your home entertainment or automation installer.