

# BACK PANEL - TIVO BOLT

When facing the back of the BOLT, the following connectors are arranged left to right.

1. **Remote Finder.** Press this button to make your remote control emit a sound. To turn off the remote finder, press this button again, or press any button on the remote.
2. **Cable/Ant.** Connects to your cable TV source or a TV antenna. Connect a Coaxial RF cable from your wall/cable source or antenna to this jack.
3. **Digital Audio (Optical).** Use an optical digital audio cable (sold separately) to connect the TiVo box to your home theater system for digital sound.
4. **Audio L/R.** Use a breakout A/V cable (sold separately) for analog stereo sound.
5. **HDMI®.** Connects to a TV, A/V receiver or home theater system. The HDMI port provides a pure digital connection for high-definition video and digital audio all in one cable.
6. **Ethernet.** Connects the TiVo box to your home network using an Ethernet cable.
7. **USB.** For future use.
8. **External Storage.** For TiVo-verified external hard drive.
9. **Power.** Connects to power outlet. The TiVo box does not have a power switch; plugging it into the wall socket turns it on. CAUTION: TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, AND FULLY INSERT.

On the underside of the BOLT, you'll find the CableCARD compartment. If you are using your BOLT with a CableCARD, this compartment holds one multi-stream CableCARD decoder. Once your CableCARD decoder is installed, you should not remove it for any reason.