

BACK PANEL - FOUR-TUNER TIVO ROAMIO/ROAMIO OTA

When facing the back of the four-tuner Roamio or Roamio OTA, the following connectors are arranged left to right.

- 1. Cable/Antenna.** Connects to your cable TV source or a TV antenna. Connect a Coaxial RF cable from your wall/cable source or antenna to this jack.
- 2. Digital Audio (Optical).** Connects to an A/V receiver or home theater system. Use an optical digital audio cable (sold separately) to connect the two-tuner TiVo Premiere DVR to your home theater system for digital sound.
- 3. Composite.** Connects to a TV, VCR, DVD recorder, or A/V system. Breakout composite cable (available at tivo.com/store) provides very good standard definition picture quality and analog audio (stereo).
- 4. HDMI.** Connects to a TV, A/V receiver, or home theater system. HDMI provides a pure digital connection for high-definition video and digital audio all in one cable.
- 5. Ethernet.** Use this jack to connect the four-tuner TiVo Roamio or Roamio OTA to your home network using an Ethernet cable. Note that a wired Ethernet or MoCA connection is required for streaming shows.
- 6. USB.** Use one of the two USB ports to connect the four-tuner TiVo Roamio or Roamio OTA to your home network using the TiVo Wireless G Network Adapter. Please note, however, that a wired network connection (Ethernet or MoCA) is required for streaming shows.
- 7. External Storage.** For TiVo-verified external hard drive.
- 8. Power.** Connects to power outlet. The four-tuner TiVo Roamio/Roamio OTA does not have a power switch; plugging it into the wall socket turns it on. CAUTION: TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, AND FULLY INSERT.
- 9. CableCARD™ Compartment (on the underside of the four-tuner TiVo Roamio only).** Compartment for one multi-stream CableCARD. Once your multi-stream CableCARD decoder is installed, you should not remove it for any reason.