

TiVo® Roamio Remote Control

The **TiVo** button takes you to the TiVo Central® screen, the starting point for all your TiVo features and settings.

If programmed, **TV PWR** turns your TV on or off.

Use **Input** to select the input (such as TiVo box, DVD player, game system) your TV displays.

Back goes back to the previous screen (in certain apps).

Guide takes you to the program guide, where you can find shows to watch or record. Press it again to see filtered views.

If programmed, **Volume** and **Mute** control the volume on your TV or A/V receiver.

Use the **Thumbs Up** and **Thumbs Down** buttons to rate shows, collections, or video providers for TiVo Suggestions.

Rewind rewinds a show. Press it up to three times for three speeds.

Replay repeats the last 8 seconds of the show. Press and hold to jump to the beginning of a show.

The **A B C D** buttons sort and filter views. Look for the onscreen tips.

Play starts playing a show from the My Shows list.

Slow plays a show in slow motion.

Clear removes the display of the info banner or program guide, and deletes titles from the My Shows or To Do list.

Live TV takes you to live TV. If you're watching live TV, use it to cycle through the tuners.

Info shows the info banner while watching live TV; press it again to make it disappear.

Use **Zoom** to change aspect ratio of shows on your TV.

Press **Select** to choose menu items or, when watching live TV, to bring up the Mini Guide.

Use the **Arrow** Buttons to navigate the TiVo menus and the program guide.

Use the **Channel Up/Down** buttons to change the channel and to page up or down while in the program guide or TiVo menus.

Press **Record** to start recording the show you're watching, or to set up a recording for a show selected in the program guide.

Fast-Forward fast-forwards through a show. Press it up to three times for three speeds.

Advance moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press Advance to jump to the next tick mark when fast-forwarding or rewinding.

Pause freezes a show. Press it again to resume playing.

Enter/Last returns you to the last channel tuned to in live TV.

