

TIVO BOLT™ REMOTE

The TIVO BUTTON takes you to the TiVo Central® screen, the starting point for TiVo features and settings.

If programmed, TV PWR turns your TV on or off.

Use INPUT to select the input (such as a DVR, DVD player, game system) your TV displays.

BACK goes back to the previous screen (in certain apps).

GUIDE takes you to the program guide, where you can find shows to watch or record.

If programmed, VOLUME and MUTE control the volume on your TV or A/V receiver.

PLAY, PAUSE, REWIND, FAST-FORWARD or play shows in SLOW MOTION. Press Rewind and Fast-Forward up to three times for three speeds.

REPLAY repeats the last 8 seconds of the show. Press and hold to jump to the beginning of a show.

The A, B, C buttons set options and sort and filter views. The D button initiates SkipMode™ while watching a recording where SkipMode is available. Look for the on-screen tips.

CLEAR removes the display of the info banner or program guide, and deletes titles from the My Shows or To Do list.



LIVE TV takes you to live TV. If you're watching live TV, use it to cycle through the tuners.

INFO shows the info banner while watching live TV; press it again to make it disappear.

Use ZOOM to change aspect ratio of shows on your TV or to return to full-screen from the Video Window.

Press SELECT to choose menu items or, when watching live TV, to bring up the Mini Guide.

Use the ARROW BUTTONS to navigate the TiVo menus and the program guide.

Use the CHANNEL UP/DOWN buttons to change the channel and to page up or down while in the program guide or TiVo menus. CHANNEL UP also initiates SkipMode™ while watching a recording where SkipMode is available.

Use the THUMBS UP and THUMBS DOWN buttons to rate shows, collections, or video providers for TiVo Suggestions.

ADVANCE moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press Advance to jump to the next tick mark when fast-forwarding or rewinding.

On a DVR, press RECORD to record the show you're watching, or to set up a recording for a show selected in the guide. On other devices, pressing RECORD has no effect.

ENTER/LAST returns you to the last channel tuned to in live TV.